



PCB Calculator

April 22, 2019

Contents

1	Introduction	1
2	Calculators	1
2.1	Regulators	1
2.2	Track-Width	2
2.3	Electrical-Spacing	3
2.4	TransLine	3
2.5	RF-Attenuators	4
2.6	Color-Code	5
2.7	Board-Classes	5

Reference manual

Copyright

This document is Copyright © 2019 by it' s contributors as listed below. You may distribute it and/or modify it under the terms of either the GNU General Public License (<http://www.gnu.org/licenses/gpl.html>), version 3 or later, or the Creative Commons Attribution License (<http://creativecommons.org/licenses/by/3.0/>), version 3.0 or later.

Contributors

Heitor de Bittencourt. Mathias Neumann

Feedback

Please direct any bug reports, suggestions or new versions to here:

- About KiCad document: <https://github.com/KiCad/kicad-doc/issues>
- About KiCad software: <https://bugs.launchpad.net/kicad>
- About KiCad software i18n: <https://github.com/KiCad/kicad-i18n/issues>

Publication date and software version

march 04, 2019

1 Introduction

The Kicad Calculator gives you the Chance to calculate the most important Things without leaving Kicad.

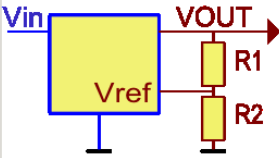
The Calculator consists the following Options:

- Regulators
- Track Width
- Electrical Spacing
- Trans Line
- RF Attenuators
- Color Code
- Board Classes

2 Calculators

2.1 Regulators

This calculator helps with the task of finding the values of the resistors needed for linear and low-dropout voltage regulators.

Regulators	Track Width	Electrical Spacing	TransLine	RF Attenuators	Color Code	Board Classes
<div style="display: flex; justify-content: space-between;"> <div style="width: 40%;">  </div> <div style="width: 55%;"> <input checked="" type="radio"/> R1: <input type="text" value="10"/> kΩ <input type="radio"/> R2: <input type="text" value="10"/> kΩ <input type="radio"/> Vout: <input type="text" value="12"/> V Vref: <input type="text" value="3"/> V Iadj: <input type="text"/> μA Type: <input type="text" value="Standard Type"/> </div> </div> <div style="text-align: right; margin-top: 10px;"> <input type="button" value="Calculate"/> </div> <div style="margin-top: 10px;"> Regulator: <input type="text"/> Regulators data file: <input type="text"/> <input type="button" value="Browse"/> <input type="button" value="Edit Regulator"/> <input type="button" value="Add Regulator"/> <input type="button" value="Remove Regulator"/> </div> <div style="margin-top: 10px;"> Message: <input type="text"/> </div> <div style="margin-top: 10px;"> Formula: Vout = Vref * (R1 + R2) / R2 </div>						

For the *Standard Type*, the output voltage V_{out} as a function of the reference voltage V_{ref} and resistors R_1 and R_2 is given by:

$$V_{out} = V_{ref} \cdot \left(\frac{R_1 + R_2}{R_1} \right)$$

For the *3 terminal type*, there is a correction factor due to the quiescent current I_{adj} flowing from the adjust pin:

$$V_{out} = V_{ref} \cdot \left(\frac{R_1 + R_2}{R_1} \right) + I_{adj} \cdot R_2$$

This current is typically below 100 μA and can be neglected with caution.

To use this calculator, enter the parameters of the regulator *Type*, V_{ref} and, if needed, I_{adj} , select the field you want to calculate (one of the resistors or the output voltage) and enter the other two values.

2.2 Track-Width

The Track Width calculator calculates the trace width for printed circuit board conductors for a given current. It uses formulas from IPC-2221 (formerly IPC-D-275).

Regulators	Track Width	Electrical Spacing	TransLine	RF Attenuators	Color Code	Board Classes
Parameters:						
Current:	<input type="text" value="0.744609"/>	A				
Temperature rise:	<input type="text" value="10.0"/>	deg C				
Conductor length:	<input type="text" value="20"/>	mm				
Resistivity:	<input type="text" value="1.72e-8"/>	Ohm-meter				
<p>If you specify the maximum current, then the trace widths will be calculated to suit. If you specify one of the trace widths, the maximum current it can handle will be calculated. The width for the other trace to also handle this current will then be calculated. The controlling value is shown in bold.</p> <p>The calculations are valid for currents up to 35A (external) or 17.5A (internal), temperature rises up to 100 deg C, and widths of up to 400mil (10mm). The formula, from IPC 2221, is</p> $I = K * dT^{0.44} * (W*H)^{0.725}$ <p>where: I = maximum current in amps dT = temperature rise above ambient in deg C W,H = width and thickness in mils K = 0.024 for internal traces or 0.048 for external traces</p>						
External layer traces:						
Trace width:	<input type="text" value="0.2"/>	mm				
Trace thickness:	<input type="text" value="0.035"/>	mm				
Cross-section area:	0.007	mm x mm				
Resistance:	0.0491429	Ω				
Voltage drop:	0.0365922	Volt				
Power loss:	0.0272469	Watt				
Internal layer traces:						
Trace width:	<input type="text" value="0.520288"/>	mm				
Trace thickness:	<input type="text" value="0.035"/>	mm				
Cross-section area:	0.0182101	mm x mm				
Resistance:	0.0188906	Ω				
Voltage drop:	0.0140661	Volt				
Power loss:	0.0104738	Watt				

2.3 Electrical-Spacing

In the Picture you can see that you can edit the Voltage and the Calculator gives you the correct Values. The minimal Values which orientatd at the IPC-2221 too.

Regulators	Track Width	Electrical Spacing	TransLine	RF Attenuators	Color Code	Board Classes		
mm								
Note: Values are minimal values (from IPC 2221)								
Voltage > 500V:		B1	B2	B3	B4	A5	A6	A7
<input type="text" value="500"/>								
Update Values								
	0-15V	0.05	0.1	0.1	0.05	0.13	0.13	0.13
	16-30V	0.05	0.1	0.1	0.05	0.13	0.25	0.13
	31-50V	0.1	0.6	0.6	0.13	0.13	0.4	0.13
	51-100V	0.1	0.6	1.5	0.13	0.13	0.5	0.13
	101-150V	0.2	0.6	3.2	0.4	0.4	0.8	0.4
	151-170V	0.2	1.25	3.2	0.4	0.4	0.8	0.4
	171-250V	0.2	1.25	6.4	0.4	0.4	0.8	0.4
	251-300V	0.2	1.25	12.5	0.4	0.4	0.8	0.8
	301-500V	0.25	2.5	12.5	0.8	0.8	1.5	0.8
	> 500V	0.25	2.5	12.5	0.8	0.8	1.5	0.8
<ul style="list-style-type: none"> * B1 - Internal Conductors * B2 - External Conductors, uncoated, sea level to 3050 m * B3 - External Conductors, uncoated, over 3050 m * B4 - External Conductors, with permanent polymer coating (any elevation) * A5 - External Conductors, with conformal coating over assembly (any elevation) * A6 - External Component lead/termination, uncoated * A7 - External Component lead termination, with conformal coating (any elevation) 								

2.4 TransLine

Transmission line theory is a cornerstone in the teaching of RF and microwave engineering. In the Calculator you can choose different sorts of Line Types and their special Parameters.

2.5 RF-Attenuators

With the RF Attenuator you can calculate different things by choosing:

- PI
- Tee
- Bridged Tee
- Resistive Splitter

and change all their Parameters.

2.6 Color-Code

This calculator helps translating the color bars from the resistor to its value. To use it, first select the *tolerance* of the resistor: 10%, 5% or equal or smaller than 2%. For example:

- Yellow Violet Red Gold: 4 7 x100 ±5% = 4700 Ohm, 5% tolerance
- 1kOhm, 1% tolerance: Brown Black Black Brown Brown

Regulators	Track Width	Electrical Spacing	TransLine	RF Attenuators	Color Code	Board Classes
	1st Band	2nd Band	3rd Band	4th Band	Multiplier	Tolerance
	Black 0	0	0	0	x 1	
	Brown 1	1	1	1	x 10	± 1%
	Red 2	2	2	2	x 100	± 2%
	Orange 3	3	3	3	x 1k	
	Yellow 4	4	4	4	x 10k	
	Green 5	5	5	5	x 100k	± 0.5%
	Blue 6	6	6	6	x 1M	± 0.25%
	Violet 7	7	7	7	x 10M	± 0.10%
	Grey 8	8	8	8	x 100M	± 0.05%
	White 9	9	9	9	x 1G	
	Gold				x 0.1	± 5%
	Silver				x 0.01	± 10%

Tolerance
 10% / 5%
 <= 2%

2.7 Board-Classes

Regulators	Track Width	Electrical Spacing	TransLine	RF Attenuators	Color Code	Board Classes	
mm ▼	Note: Values are minimal values						
		Class 1	Class 2	Class 3	Class 4	Class 5	Class 6
	Lines width	0.8	0.5	0.31	0.21	0.15	0.12
	Min clearance	0.68	0.5	0.31	0.21	0.15	0.12
	Via: (diam - drill)	--	--	0.45	0.34	0.24	0.2
	Plated Pad: (diam - drill)	1.19	0.78	0.6	0.49	0.39	0.35
	NP Pad: (diam - drill)	1.57	1.13	0.9	--	--	--